


VEHICLE LOOKUNDER MIRROR ASSEMBLY GUIDE

ASSEMBLY:

1. Attach the Telescopic Handle to the Mirror base as per diagram below (if not already assembled).
2. Tension the Nyloc Nut as necessary (do not over tighten, as damage may occur to aluminum handle).

NOTE: Base Light Accessory is NOT included. Can be purchased seperately.

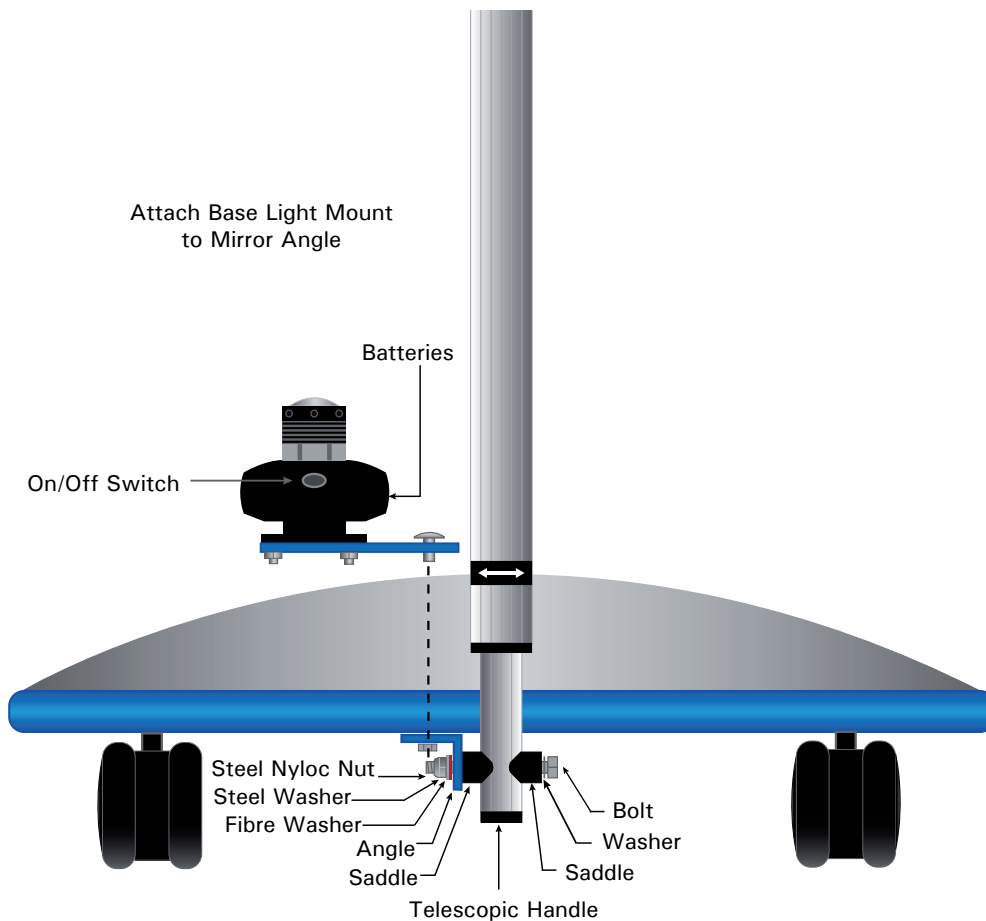

TRAFFIC MIRRORS ONLINE

3 Bert Dr, Unit 10 - West Bridgewater
MA 02379 - United States

contactus@trafficmirror.com
www.trafficmirror.com

781-344-8459

